



Bottom sound ON:  
On all buttons.

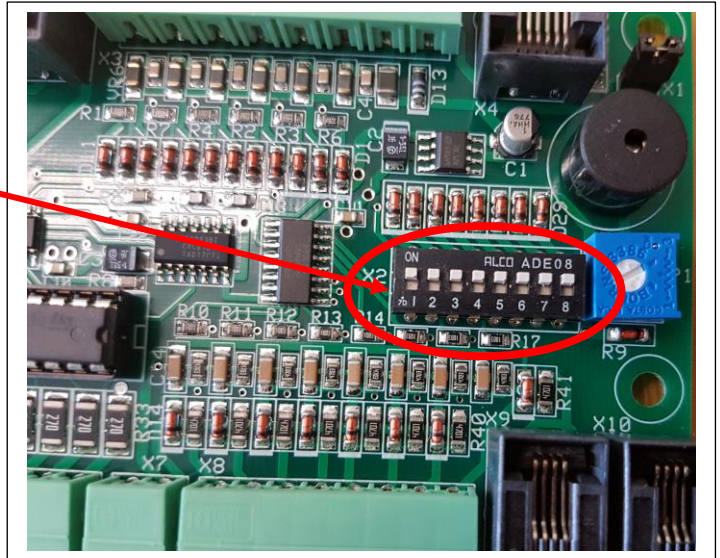

Bottom sound OFF:  
On all buttons.

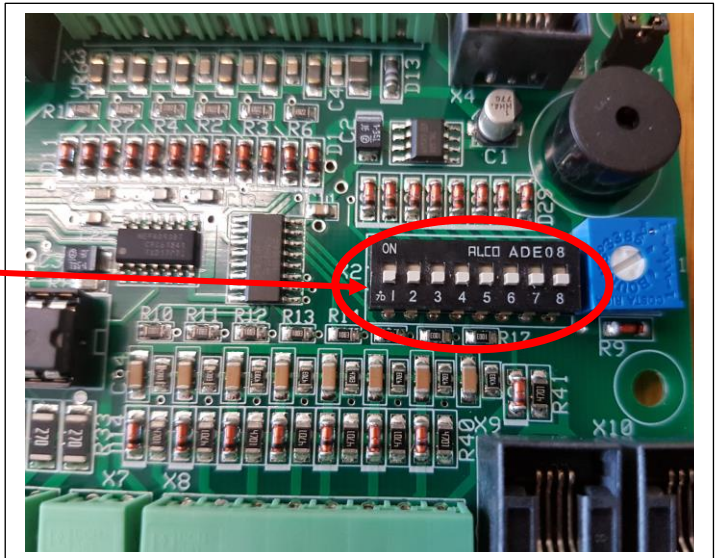

Bottom sound ON:  
On button 3 6 and 7.

